

USER GUIDE

INDUSTRIAL DATA COMMUNICATIONS

SRM6000

Frequency Hopping Spread Spectrum
Radio Modem



It is essential that all instructions contained in the User Guide are followed precisely to ensure proper operation of equipment.

FCC Notification

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

- 1) This device may not cause harmful interference and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

The device must be operated as supplied by Data-Linc Group. Any changes or modifications made to the device without the express written approval of Data-Linc Group may void the user's authority to operate the device.

Caution: This device has a maximum transmitted output power of 955 mW. It is required that the transmit antenna be kept at least 23 cm away from nearby persons to satisfy FCC RF exposure requirements.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a industrial installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Whenever any Data-Linc Group SRM series modem is placed inside an enclosure a label **must** be placed on the outside of that enclosure which includes the modem's FCC ID.

The following antennas are approved for use with Data-Linc Group's 900 MHz series modems.

NOTE: Per FCC Rules, the maximum power allowed at the antenna is 4 Watts E.I.R.P.

900MHz Directional Antenna

Gain	Manufacturer	Manufacture Model Number	Data-Linc Model Number
8.2 dBi	Larsen	YA6900W	A-YB
11 dBi	Larsen	YA5900W	A-YHB

900MHz Omni-Directional Antenna

Gain	Manufacturer	Manufacture Model Number	Data-Linc Model Number
5.2 dBi	Maxrad	MAX9053	A-OB
7.2 dBi	Maxrad	MAX9075	A-O5B
0 dBi	Ying Hao	YH920801/AD-725-A-1	A-06/ADJ
0 dBi	Centurion	EXC-902-BN	A-06BH-3S / 10S (**)

(**) This part number refers to an antenna kit(s). The 0 dBi refers to the antenna portion of the kit.

Note: The antenna used for this device must be professionally installed on a fixed-mounted permanent outdoor structure for satisfying RF exposure requirements, including antenna co-location requirements of 1.1307(b)(3).

Table of Contents

	Page
Introduction	3
Loop Back Bench Test	3
Modem Configuration	5
Main Menu Option (0): Set Operation Mode	6
Main Menu Option (1): Set Baud Rate	8
Main Menu Option (2): Edit Call Book	9
Main Menu Option (3): Edit Radio Transmission Characteristics	12
Main Menu Option (4): Show Radio Statistics	19
Main Menu Option (5): Edit Multi-Point Parameters	20
Main Menu Option (8): Password	24
Modem Location	26
Using an External Antenna	27
Modem Front Panel LED's	28
Sample Data Communication Links	29
Technical Specifications	31
Troubleshooting	32
Technical Support	33
Return Material Authorization	33
Contact Information	33
Appendix A	34

Introduction

The SRM6000 transceiver modems are high performance wireless radio modems designed for heavy-duty industrial data communications in the 902-928 MHz license-free band. It employs advanced spread spectrum frequency hopping and error detection technology to achieve very reliable, noise and interference immune operation. A high data RF rate of 144 Kbps and superior sensitivity provide ultra reliable data integrity at data rates from 1200 to 115.2 Kbps. Full duplex operation at data rates up to 57.6 Kbps provide the fast response times needed for polling communications. The SRM6000 has a rated range of up to 25 miles (40 km) and an installed range of up to 35 miles (56 km) in optimal conditions with line-of-sight and an omni directional antenna. This can also be extended further with repeaters or higher gain antenna.

The SRM6000 can be operated in a number of different modes to satisfy a broad range of communications requirements. It can be configured for point-to-point or multi-point operation with a unlimited number of remote sites on a single master depending on data throughput requirements. Repeaters can be used in the system to extend range and eliminate dead RF zones that are blocked by obstructions.

External antennas can be used with up to two hundred feet of coax. This provides a boost in signal strength and decreases induced noise levels. With external antennas, radio modems can be located inside buildings or metallic enclosures.

The SRM6000 will operate in virtually any environment where RS232 data communications are required. The transceiver RS232 interface is a standard DB9-F connector that is configured for Data Communications Equipment (DCE) operation. The SRM6000 will connect with a straight through RS232 cable to a device configured for Data Terminal Equipment (DTE) operation.

The user guide covers the operating modes and configurations that are available to users of the SRM6000. It also provides the user with bench testing instructions, technical information and specifications for the SRM6000.

In most applications, the SRM6000's come from Data-Linc Group pre-configured for the application in which they are going to be used. Generally no other configuration is required. If you are unsure if the modem needs further configuration, please contact Data-Linc Group.

Loop Back Bench Test

This procedure provides a simple and easy demonstration of proper operation of the Data-Linc Group SRM6000 radio modems. The Loop Back Bench Test should be conducted to ensure system functionality prior to actual installation, and to allow the installer to become familiar with operation of the radio modems. A few minutes on the bench can save time in the field.

1. The SRM6000s that you have received are typically pre-configured by Data-Linc Group to function as a system. No changes in configuration should be made with out first consulting the factory.
2. Attach the bench test antenna included with the radio modem.
3. Locate the SRM6000 labeled "MASTER." Using a standard RS232 cable, connect the radio modem to a communication port on a computer that has a communications utility such as HyperTerminal, ProComm Plus or Terminal for Win3.x. Set the data rate (BPS) of the terminal program to match the port rate of the SRM6000 Plug the power supply into an AC outlet of the correct voltage, and connect the power supply to the SRM6000. The red LED marked "P" (power) on the radio modem front panel should turn on.

4. If your system is configured to use a repeater(s), find the SRM6000(s) marked "REPEATER," and connect its power supply as with the master above. The red LED marked "P" (power) on the radio modem should turn on. If your system does not have a repeater, skip this step.
5. Locate the SRM6000(s) labeled "REMOTE." Connect the power supply to the SRM6000. The red LED marked "P" (power) on the "REMOTE" radio modem should turn on. If it is a point-to-point system the amber LED "C" (carrier detect) should turn on for both the Remote and master. If it is a point to multi-point system the "C" LED will turn on for the Remote only. Attach a Loopback test jumper on the RS232 data DB9F connector of the SRM6000 remote. The jumper shorts pins 2 and 3 of the data connector.
6. Using the terminal that is connected to the "MASTER" SRM6000, hold down a key, "A" for example. The letter "A" should begin to scroll across the terminal screen. This indicates that the data (the letter "A" in this case) is being transmitted from the terminal through the "MASTER" SRM6000. Then through the "REPEATER" (if applicable), on to the "REMOTE" SRM6000, through the loop back test jumper, back through the "REPEATER" (if applicable) to the "MASTER," and then the terminal. This establishes that the SRM6000s are functioning in full duplex mode and are operating properly. Note: If something appears scrolling across the terminal screen other than the correct character for the key being pressed, it indicates that the terminal's settings and data rate may not be set to match that of the SRM6000.
7. While continuing to press the letter "A," the yellow LED marked "I" (Input) and the green LED marked "O" (Output) should both be flashing rapidly on the master radio modem and the Remote with the jumper attached. Remove the jumper from the "REMOTE" radio modem. The letter display scrolling across the screen should stop, and the "O" LED will stop flashing at the "MASTER." The "I" LED will flash each time the key is pressed; indicating that the radio modem is receiving a data input signal on the RS232 port. The "O" LED on the "REMOTE" will flash each time a key is pressed; indicating that the radio modem is outputting a data input signal on the RS232 port. The "I" LED on the "REMOTE" will remain off with no data loop back. Replace the Loopback test jumper in the "REMOTE" radio modem. Hold down the key again, and the letter should once again scroll across the computer screen. If there is a "REPEATER" in the system its "C" (carrier detect) LED will flash rapidly when data is being passed. The "REPEATER" "I" and "O" LED's remain off during normal operation.

Repeat steps 5 through 7 with each of the "REMOTE" units for your system.

Data-Linc Group strongly recommends that once these tests have been successfully completed, all devices that will be used in the system (PLC, RTU, software, computers, etc.) be connected to the system and bench tested to assure full functionality before final installation. If the radios will not function in the system on the bench, remove the radio modems from the system and confirm that the equipment will communicate with a direct hard wire link. If the devices will not communicate directly without the radio modems, then they will not communicate with them. The radio modems emulate a direct asynchronous communication link.

Once the preceding bench tests have established that the system is fully functional, site installation should proceed. However, before connecting the entire system hardware, Data-Linc Group recommends that steps 3 through 7 above be performed on-site to confirm radio modem operation and adequate line of sight between the antennas.

SRM6000 Configuration

The SRM6000 allows you to set several parameters to suit your particular application. All adjustments are done through the SRM6000 setup program, a user interface that eliminates the need for setup diskettes, DIP switch settings or custom software.

To access the configuration menu, connect the radio modem to any terminal program with port settings of 19.2Kbaud, 8 data bits, no parity and one stop bit. With the modem connected to the PC running the terminal program, press the Configure button located behind the pinhole next to the DB-9 connector on the front of the modem. While any terminal program that can be set to 19200 baud will work, examples for this user guide were generated using the Microsoft Windows 2000 application "HyperTerminal."

Note: When using HyperTerminal, set Handshaking to none.


Table 1: Terminal Settings

Parameter	Setting
Baud Rate	19200
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

When the setup program is invoked, the "O" LED on the SRM6000 front panel will flash once when the Configure button is pressed and the "C" LED will remain on for the entire time the radio modem is in setup mode.

The main menu provides the radio modem's unique call book number and the set of choices for editing the operational parameters and viewing the performance data.

Figure 1: Main Menu

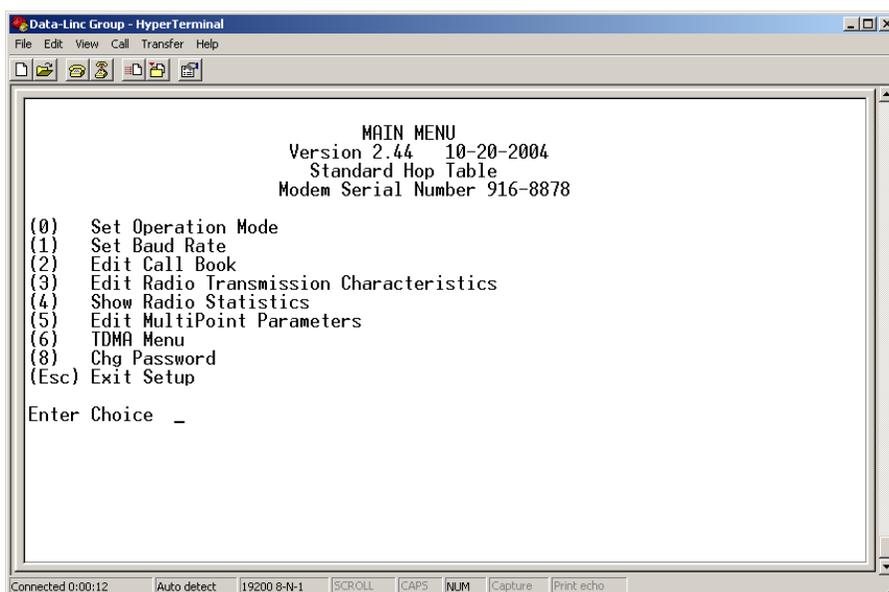


Main Menu Option (0): Set Operation Mode

When item (0) is selected, the Operation Mode Menu appears as shown in figure 2. The Operation Mode option is used to designate the method in which the particular SRM6000 will be used. The SRM6000 operates in a master to remote configuration; therefore, any radio modems that are intended to operate together must be set up as such. In a point-to-point setup, either the master or remote may be used on either end of the communications link. One consideration when setting up the radio modems is that a number of parameters are controlled by the settings in the master; therefore, you may wish to deploy the master on the communications end where you will have easier access to the radio modem.

Figure 2: Mode Menu

Shown below are example settings. Please refer to supplied configuration sheets for your modem's configuration.

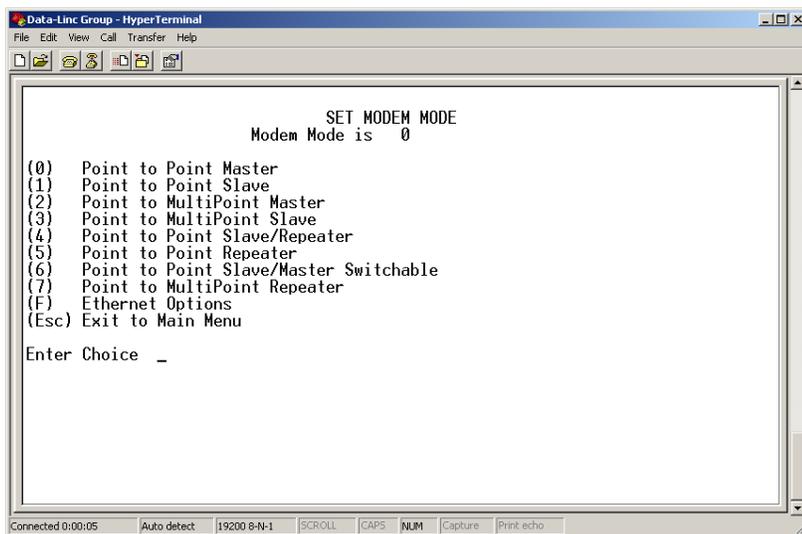

(0) Point-to-point Master

The SRM6000 operates in a master/remote configuration. When designated as a master in point-to-point mode, the radio modem will call any or all remotes it is instructed to call in the call book. The master determines the settings used for all Radio Transmission Characteristics, regardless of the settings in the remotes and/or repeaters.

(1) Point-to-Point Remote

When set up as a point-to-point remote, an SRM6000 will communicate with any master in its call book, either directly or through one or two repeaters. When functioning as a remote, the Entry to Call feature in the radio modem's call book (Figure 3) is not operational. The remote will communicate with any master on the list that calls.

(2) Point-to-Multi-Point Master

The SRM6000 may be set to run in multi-point mode, which allows one master to simultaneously be in communication with numerous remotes. A point-to-multi-point master will communicate only with other radio modems designated as point-to-multi-point remotes or point-to-multi-point repeaters.

(3) Point-to-Multi-Point Remote

Setting (3) allows the radio modem to operate as a remote in a multi-point network.

Please refer to the section entitled multi-point Operation, for more information on running a multi-point network.

(4) Point-to-Point Remote/Repeater

Option 4 allows you to designate the radio modem to act as either a remote or a repeater, depending upon the instructions received from the master for the specific communications session. When a radio modem is placed in an ideal location, this setting offers the flexibility of using that radio modem as an end point in the communications link (remote) or to extend the link to a point further (repeater). These functions are not, however, available simultaneously (the radio modem cannot act as both a remote and a repeater at the same time).

A word of caution: Configured as a repeater, a radio modem has no security features as explained below. When a radio modem is designated as a point-to-point remote/repeater, it will allow any master to use it as a repeater.

(5) Point-to-Point Repeater

SRM6000 radio modems allow the use of up to two repeaters in a communications link, significantly extending the operating range. When designated as a repeater, a radio modem behaves as a pass-through link. All settings for the call book, baud rates, and radio transmission characteristics are disabled. A repeater will connect with any master that calls it (the repeater must still be set up in the master's call book).

The use of one repeater in a communications link will reduce the top data throughput available when compared to a direct master to remote link (generally on the order of 50%). This impact is generally noticed only when using the radio modems at 115.2 Kbaud. The throughput does not decrease further if two repeaters are used.

(6) Point-to-Point Remote/Master Switchable

Mode 6 is a versatile option that allows the radio modem to be controlled entirely through software commands. When in mode 6, a number of key parameters in the radio modem's user interface may be changed either directly (as if using the Windows Terminal program) or through the use of script files. In addition, when the radio modem is in mode 6 and not calling a remote, it will be a remote itself and accept any appropriate calls from other radio modems.

In mode 6:

- The radio modem remains in remote mode until called by another radio modem in its Call Book or instructed to call another radio modem through an ATDT command. The master will disconnect when DTR goes low..
- The user may change settings in the user interface without using the reset button (this may be of particular value if the radio modem is not in an easily accessible location).
- Predetermined script files may be used which allow some of the radio modem's settings to be changed upon execution of that file. This, in turn, allows the user to establish command sets that will instruct the radio modem to call a predetermined remote.

Note: For a detailed explanation covering the features of Mode 6, please contact the factory.

(7) Point-to-Multi-Point Repeater

Setting (7) allows the radio modem to operate as a repeater in a multi-point network.

Please refer to the section titled, "Multi-Point Operation", for more information on running a multi-point network.

(F) Ethernet Options

This menu is only needed for the SRM6210E Ethernet modems. When using the SRM6000, this setting should be left at factory default.

Main Menu Option (1): Set Baud Rate

When option (1) is selected you will be able to change the radio modem's RS232 baud rate. This is the communication rate between the radio modem and the instrument to which it is connected. It is important to note that this is independent of the baud rate for the other radio modem(s) in the communication loop. For example, SRM6000s may be used in an application to send data from remote process instrumentation to an engineer's computer. In this application, the baud rate for the radio modem on the instrumentation might be set to 9600, and the radio modem on the computer might be set to 57,600 or 115,200.

In general, it is desirable to set the baud rate to the highest level supported by the device to which it is connected. However, please note that this may actually result in slower data communications if the UART chipset of the connected device does not support higher data rates.

ModBus RTU and various data word sizes and parity configurations

The additional features are support for ModBus RTU and support various data word lengths and parity. These features are available under selection options (A) and (B).

There are six data word length and parity configurations available. In the Set Baud Rate menu select (A) and type in the number corresponding to the configuration below. The default setting is 0 (8,N,1) and is the most commonly used serial communications protocol.

Table 2: Available data word length and parity selections

Menu Setting	Data Bits	Parity	Stop Bits
0	8	None	1
1	7	Even	1
2	7	Odd	1
3	8	None	2
4	8	Even	1
5	8	Odd	1

ModBus RTU

Support for ModBus RTU protocol is available. The default for the ModBus RTU setting is (0) not enabled.

To enable the ModBus RTU mode:

1. In the "Set Baud Rate" menu enter (B) and then select (1)
2. In the "Set Multi Point Parameters" menu, set Master Packet Repeat to (3).

Note: When using the SRM6000's in ModBus RTU mode the Master Packet Repeat must be set to (3) regardless of whether the modems are being used in point-to-point or multi-point mode. If a setting that is higher than (3) is required, it can be done, but the throughput speed will be decreased. (A higher Master Packet Repeat setting may need to be used when the radios are in a high noise environment or at long ranges).

RS232/485 and Turnoff delay

These settings do not pertain to the SRM6000 modem

Flow control

This setting allows for the use of hardware handshaking. Most applications do not require handshaking when using the SRM6000. The default setting is 0 (no handshaking)

Menu Setting	Port
0	None
1	RTS
2	DTR

Main Menu Option (2): Edit Call Book

The Call Book is an innovative feature in the SRM6000 that offers both security and flexibility in use. The Call Book accomplishes this by allowing the user to determine with which other SRM6000s a given radio modem will communicate, based on the Call Book numbers for both the master and remote. The radio modem's Call Book number is encoded in the microprocessor and identified on a label on the modem. The instructions provided in this section are for point-to-point mode only. Use of the Call Book for multi-point systems is explained later in this chapter. For two SRM6000 radio modems to communicate in point-to-point mode, three events must occur:

1. The call book number for the master must be listed in the Remote's Call Book.
2. The call book number for the remote must be listed in the master's Call Book.
3. The master must be programmed to call the remote.

As shown in figure 3, the Call Book allows users to set up a list of up to 10 SRM6000s to communicate with. Designate up to 2 repeaters to be used in communicating with a given radio modem, and tell the master which remote to call. To direct the master to call a remote, the Remote must be in the Call Book Menu. A specific remote may be called by entering (C) at the prompt, followed by the menu number corresponding to that remote. To call any available remote in the list, the user should enter C and then A (for All).

Note: To call a remote through one or two repeaters, you must call that remote directly (as opposed to using the Call All option). When Call All is selected the master is not able to connect with any remotes through repeaters. This is because the master calls every remote in the list when instructed to call all and will connect with the first remote to respond. When calling through a repeater, the master must first call that repeater and establish a communications link with it prior to making contact with the remote.

Figure 3: Call Book Menu

Shown below are example settings. Please refer to supplied configuration sheets for your modem's configuration.

```

Data-Linc Group - HyperTerminal
File Edit View Call Transfer Help
MODEM CALL BOOK
Entry to Call is 00
Entry   Number   Repeater1   Repeater2
(0)     911-3948
(1)     000-0000
(2)     000-0000
(3)     000-0000
(4)     000-0000
(5)     000-0000
(6)     000-0000
(7)     000-0000
(8)     000-0000
(9)     000-0000
(C)     Change Entry to Use (0-9) or A(ALL)
(Esc)   Exit to Main Menu
Enter all zeros (000-0000) as your last number in list
-
Connected 0:00:02  Auto detect  19200 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo

```

Entering or Modifying Numbers in the Call Book

Entering or modifying call book numbers in the Call Book is a straightforward process. When in the Call Book menu, select the entry number (0 – 9) you wish to edit. You will be prompted for the new number (formatting is automatic, you do not need to enter the dash). Once the number is entered (unless it is 000-0000) you will be asked for the call number of the first repeater to be used. If no repeater is to be used, enter the escape key; your entry will be complete and you will be back in the Call Book menu screen. If you enter a repeater number, you will then be prompted for the call number of the second repeater to use. If a second repeater is being used, enter the call number at this time; if not, enter the escape key. Once again, the radio modem will retain your entries, as shown in the updated Call Book menu screen.

Note: It is important that the Call Book slots (0 – 9) are filled sequentially beginning with 0, the first slot in the book. Call Book numbers do not need to be entered in numerical order; however, there must not be any 000-0000 numbers in the middle of the list of good Call Book numbers. The reason for this is that when a master is instructed to Call All available remotes, it will call all remotes listed until it reaches the first number of 000-0000. If a valid call book number is entered after the all zero number, it will not be recognized as a valid number to be called by the master.

Edit Call Book in Multi-Point Systems

In a multi-point system, the remotes and repeaters are not listed in the master's Call Book. When establishing such a system, it is necessary only to have the master's Call Book number in each remote's and repeater's Call Book, and to have each repeater's Call Book number in the Call Book of each remote which may potentially communicate through it.

The following example shows the Call Books of a multi-point system comprised of a master, repeater and remote in which the remote can communicate either through the repeater or directly to the master:

Multi-Point Master Call Book (Unit Call Book number 555-0001)

Entry	Number	Repeater 1	Repeater 2
(0)	000-0000		
(1)	000-0000		

No call book number entries are necessary in the master's Call Book

The master's Call Book may be programmed to call any entry

Multi-Point Repeater Call Book (Unit Call Book number 555-0002)

Entry	Number	Repeater 1	Repeater 2
(0)	555-0001		
(1)	000-0000		

Multi-Point Remote Call Book (Unit Call Book number 555-0003)

Entry	Number	Repeater 1	Repeater 2
(0)	555-0001		
(1)	555-0002		
(2)	000-0000		


Main Menu Option (3): Edit Radio Transmission Characteristics

When option (3) is selected in the main menu the screen in figure 4 appears, which allows the user to modify the radio transmission characteristics of the radio modems. As stated in the warning, these parameters are for the experienced user who has a good understanding of the principles of radio data transmission. They should be changed only after consulting this user guide.

It is important to note that the radio parameters between any radio modems in communication will be determined by the settings for the master (except when in multi-point mode, see (4) RF Data Rate below). While the settings may be modified for the remote(s) and/or repeaters, they will be overridden by the master's parameters.

Figure 4: Radio Parameters Menu

Shown below are example settings. Please refer to supplied configuration sheets for your modem's configuration.

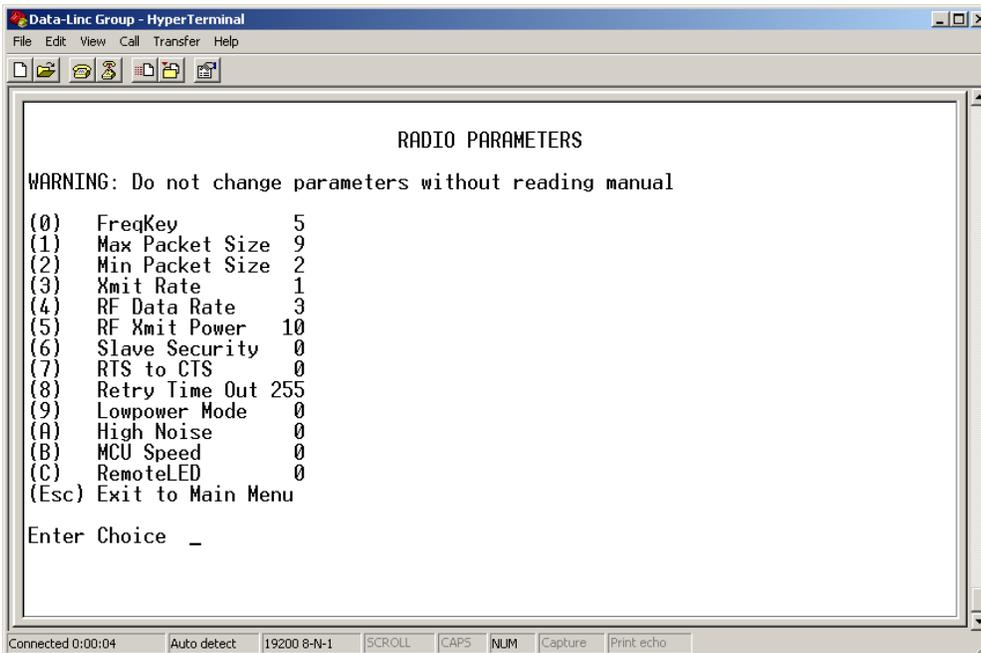


(0) FreqKey

Selection (0) in the Radio Parameters menu allows the user to modify the hopping patterns of the radio modems to minimize the interference with other SRM6000 radio modems in operation in the area. For instance, if there were 10 pairs of SRM6000s in operation within a factory or refinery, changing the Frequency Key would ensure that they would not jump onto the same frequencies at the same time for the same length of time.

There are 15 choices available for the Frequency Key (0-9 and A-E). It is recommended that a list be maintained of the settings for each master to ensure that each is set to a different hopping pattern.

Some applications require changes in the frequency tables. Option F allows you to modify these parameters. Note: most applications do not require any modification to the frequency tables. Please consult with Data-Linc Group before making changes.

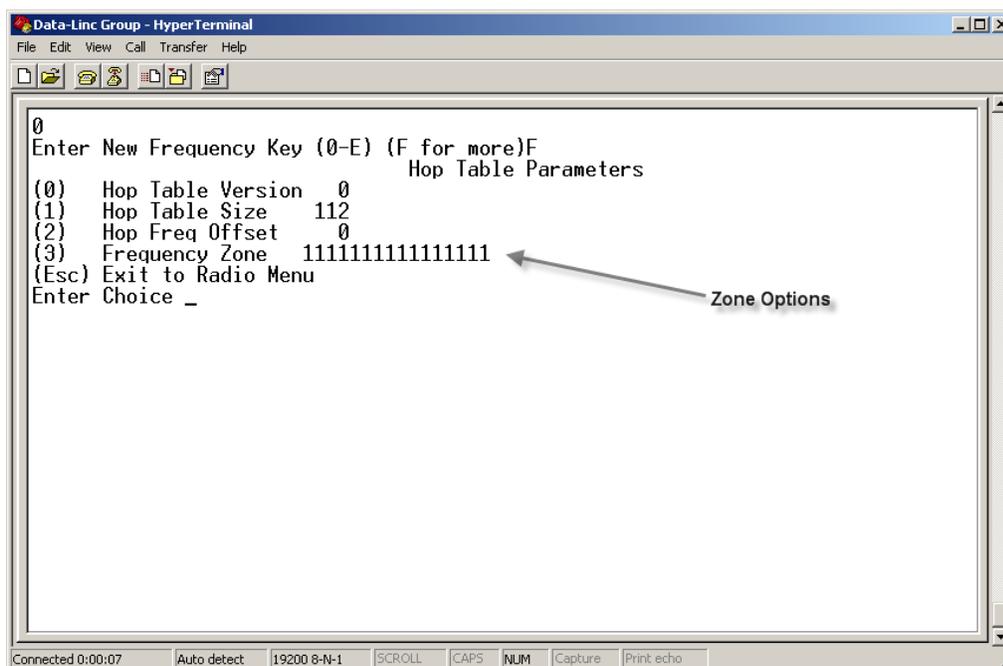

(0) Hop Table Version

Entry **0** allows the user to choose the portion of the band in which the transceiver will operate.

Selection	Name	Band
0	Standard	Full 902-928 MHz
1	Australia	915-928 MHz
2	International	902-928 MHz, 16 fewer frequencies than full U.S. set
3	Taiwan	916-920 MHz
4	New Zealand	921-928 MHz
5	Notch	Uses 902-928 MHz, with center frequencies of 911 to 919 notched out
6	Brazil	902-915 MHz

(1) Hop Table Size

Within the specified band, the number of frequencies may be set ranging from 50 to 112.

(2) Hop Freq Offset

The Hop Freq Offset option is not functional in the SRM6000.

(3) Frequency Zone

Frequency Zone: The idea of frequency zoning is to divide the available band (902-928 MHz) into smaller bands, in this case 16 smaller bands each consisting of 7 frequency channels. These 16 Zones are stored in a Word, which is made up of 16 bits numbered 0-15. These bits when displayed LSB to MSB directly represent the zones that the radio will operate on from lowest frequency to highest. A value of "1" in the bit sequence will instruct the radio to operate within the represented band. Likewise, a "0" value will instruct the radio to bypass the represented band. This feature should only be used with the standard hop table.


Binary Zone Number (LSB First)	Beginning Freq. (MHz)	Ending Freq. (MHz)	Number of Channels
0	902.2464	903.6288	7
1	903.8592	905.2416	7
2	905.4720	906.8544	7
3	907.0848	908.4672	7
4	908.6976	910.0800	7
5	910.3104	911.6928	7
6	911.9232	913.3056	7
7	913.5360	914.9184	7
8	915.1488	916.5312	7
9	916.7616	918.1440	7
10	918.3744	919.7568	7
11	919.9872	921.3696	7
12	921.6000	922.9824	7
13	923.2128	924.5952	7
14	924.8256	926.2080	7
15	926.4384	927.8208	7

Warning: In order to stay within FCC regulations it is required that a minimum of 50 separate frequency channels be used within a hop pattern. This means that a minimum of 8 frequency zones along with the standard hop table is required for legal communications.

Frequency Zones are activated through the setup menu. To enable zoning from the main setup menu:

1. Select Menu 3 "Edit Radio Transmission Characteristics"
2. Select Option 0 "FreqKey"
3. Select F "For More"
4. Select Option 3 "Frequency Zone"

Enter 1 to enable desired frequency zone and a 0 to disable desired frequency zone. Frequency Zone entries begin with 0 (LSB) and continue through 15 (MSB)

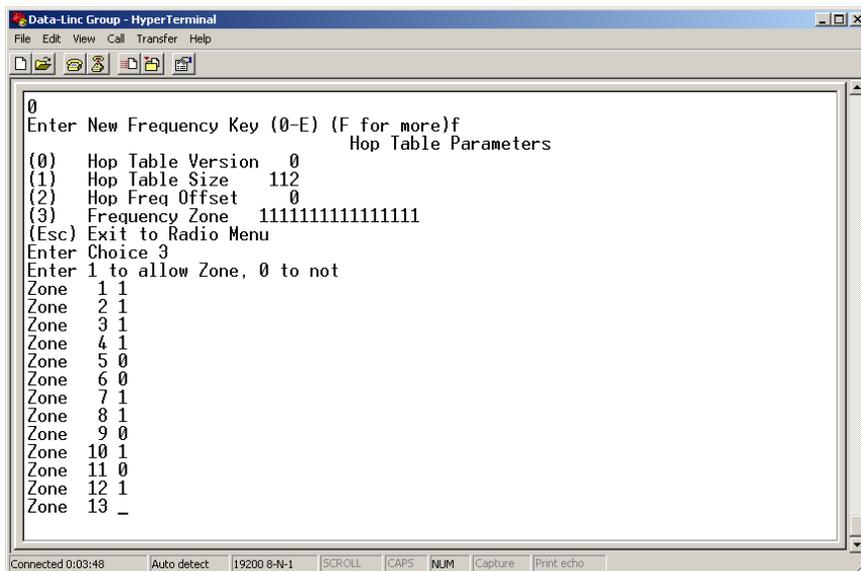

(1) Max Packet Size and (2) Min Packet Size Selections

(1) and (2) allow the user to designate the size of the packets (in bytes) used by the radio modem in its communication link. This may be of particular value when using the SRM6000 with different communications software packages; you may find that throughput is optimized when packet sizes are restricted by the radio modem.

Packet size is determined by a combination of the settings entered by the user and the RF Data Rate. In addition, the Max Packet Size is a function of the setting selected for the Min Packet Size. Tables 2, 3 and 4 provide the packet sizes for each different combination of settings.

Table 3: Minimum Packet Size Settings (bytes)

Setting	Min Packet Size RF Data Rate = 2	Setting	Min Packet Size RF Data Rate = 3
0	16	0	8
1	21	1	12
2	26	2	16
3	32	3	20
4	37	4	24
5	42	5	28
6	48	6	32
7	53	7	36
8	58	8	40
9	64	9	44

Table 4: Maximum Packet Size Settings where RF Data Rate=3

		Maximum Setting									
		0	1	2	3	4	5	6	7	8	9
Minimum Setting	0	8	24	40	56	72	88	104	120	136	152
	1	12	28	44	60	76	92	108	124	140	156
	2	16	32	48	64	80	96	112	128	144	160
	3	20	36	52	68	84	100	116	132	148	164
	4	24	40	56	72	88	104	120	136	152	168
	5	28	44	60	76	92	108	124	140	156	172
	6	32	48	64	80	96	112	128	144	160	176
	7	36	52	68	84	100	116	132	148	164	180
	8	40	56	72	88	104	140	136	152	168	184
	9	44	60	76	92	108	124	140	156	172	188

Table 5: Maximum Packet Size Setting where RF Data Rate=2
Maximum Setting

	0	1	2	3	4	5	6	7	8	9
0	15	36	58	79	100	121	143	164	185	206
1	20	42	63	84	105	127	148	169	190	212
2	26	47	68	90	111	132	153	175	196	217
3	31	52	74	95	116	137	159	180	201	222
4	36	58	79	100	121	143	164	185	206	228
5	42	63	84	105	127	148	169	190	212	233
6	47	68	90	111	132	153	175	196	217	238
7	52	74	95	116	137	159	180	201	222	244
8	58	79	100	121	143	164	185	206	228	249
9	63	84	95	127	148	169	190	212	233	254

(3) Xmit Rate

There are two settings for the Transmit Rate parameter. For normal operation the SRM6000 should be set at Transmit Rate 1. Transmit Rate 0 is useful to qualitatively gauge signal strength. When set to Transmit Rate 0 the radio modems will transmit data back and forth continuously, and the strength of the signal may be gauged by viewing the Show Radio Statistics option.

Due to the fact that the radio modems transmit continuously when Transmit Rate is set to 0 (whether or not they have data to send) they use radio frequency spectrum unnecessarily. Therefore, Transmit Rate 0 should be used only as a diagnostic tool and not for normal operation.

(4) RF Data Rate

The SRM6000 has two settings for the RF Data Rate (not to be confused with the RS232 Baud Rate). Setting 2 should be used when the radio modems are close together and data throughput is to be optimized. Setting 3 should be used when the radio modems are farther away and a solid data link is preferred over data throughput.

Note: The RF Data Rate setting must be identical for all units in the system. Any radio modem with a different RF Data Rate than the master will not establish a communication link.

(5) RF Xmit Power

The SRM6000 offers users the ability to modify the Transmission Power of the radio modem. There are 10 power settings available (1-10) which are roughly linear. Therefore a setting of 10 is full power (or 1 Watt) and 1 is 10% power (or 100 mw). The following guidelines should be followed when setting the RF Transmission Power:

Table 6: Power Transmit Settings

Setting	Power Level	Used When
1-3	Low	Pair of pairs of radio modems operating within the same or adjoining rooms.
4-6	Medium	More than one pair of radio modems operating withi the same facility.
7-10	Full	Normal operation extending beyond a facility.

(6) Remote Security

With option 6 the user may disable the radio modem's security so it will accept a call from any other SRM6000. The default setting is 0 where security is enforced (the caller's call book number must be in the remote's Call Book). With a setting of 1 security is disabled.

As mentioned in mode 6, Remote Security must be set to 1 when the unit is operating in a point-to-point system where it may need to accept calls from more than 10 different SRM6000s. However, it is important to note that when Remote Security is set to 1, the radio modem will accept calls from any other SRM6000, and additional system security measures should be taken to prevent unauthorized access.

(7) RTS to CTS

Menu selection 7 in the Radio Parameters provides the option of allowing the RTS line (pin 7) on the master radio modem to control the CTS line (pin 8) of the remote. This pass-through control can be enabled in point-to-point mode as well as point-to-multi-point. In the latter, the master RTS line will control all remotes' CTS lines. When this mode is enabled the CTS line ceases to function as flow control. Therefore it is not recommended to enable this feature when operating at RS232 speeds above 38.4 KB.

To enable this mode, enter 7 in the Radio Parameters menu. An entry of (1) will enable the RTS-CTS control a (0) will disable it.

(8) Retry Time Out

The Retry Time Out parameter allows the use to determine when a remote will drop a connection to a master or repeater in multi-point mode. The default setting is 255, meaning that if one packet in 255 from the master is sent successfully to the remote, it will maintain a link. The lowest setting is 8, at which a remote will drop a connection much faster.

The Retry Time Out parameter is useful when a multi-point system is used with a moving master or remotes. As the link gets weaker, a lower setting will allow a remote to drop it's link and search for a stronger connection.

While intended primarily for multi-point systems, the Retry Time Out parameter may also be modified in point-to-point systems. In point-to-point mode the Retry Time Out should not be set to a value of less than 151.

(9) Lowpower Mode

The Lowpower Mode is an option that, when enabled, allows the SRM6000 to use less power when set as a multi-point remote.

With a setting of 2 through 63, the SRM6000 will sleep between slots. For example, at a setting of 2, the SRM6000 sleeps 1 out of 2 slots, at a setting of 3, the SRM6000 sleeps 2 out of 3 slots, and so on.

Note:

1. The Lowpower mode is for use only in point to multi-point systems and only on the multi-point remotes. The power savings occur when the option is enabled and the remote has a link to its master or repeater. There are no power consumption savings when the remote is transmitting data back to the master. Designed primarily for SCADA systems, the Lowpower Mode is of little value when significant amounts of data is being sent from the remote to the master.
2. Because the Lowpower mode puts the transceiver to sleep, a latency will be introduced before it becomes fully linked to the master. This latency can range from 6 ms to 2.5 seconds.
3. To communicate to the RS232 port of a SRM6000 that is in Lowpower Mode, the RTS line must be held high to wake it up. The SRM6000 will wake up within approximately 20 milliseconds or when CTS goes high.
4. If the RTS line on the remote is held high, the SRM6000 will remain in normal operation regardless of the Lowpower Mode setting.

(A) High Noise

Use the menu to indicate if the modem will be operated in an environment with a high degree of radio noise and interference.

With a setting of 1, the rejection of interference is improved, at the cost of reduced range and/or throughput.

(B) MCU speed

Use this menu to set the speed of the MCU (processor) in the modem.

Note: Only needed when the SRM6000 is set to 115.2Kbaud (or above) and/or if LincView (diagnostics) is being used.

Setting	Description	Notes
0	Low speed	Reduces current consumption
1	High speed	Required for 230Kbaud

Main Menu Option (4): Show Radio Statistics

Option (4) in the main menu allows the user to view data transmission statistics, which have been gathered by the Transceiver during the most recent session. Statistics are gathered during each data link and are reset when the next link begins. Ideally, noise levels should be below 30, and the difference between the average signal level and average noise level should be 30 or more. High noise levels tend to indicate other sources of RF interference, while low signal levels indicate a weak link. The “Local” stats are the statistics that are being gathered by the modem you are connected to while “Remote1, Remote2, and Remote3” are the stats of the repeater(s) that the modem you are attached to is using to get back to the master modem. The following sections provide information useful to the process of troubleshooting and improving radio links.

Average Noise Level

The average noise level indicates the level of background noise and interference at this modem and at each of the modems used as repeaters in the link. The number is an average of the noise levels measured at each frequency in the modems’ frequency hop table. The individual measurement values at each frequency hop channel are shown in the frequency table. The frequency table is accessed by pressing the ENTER key on the computer when the radio statistics menu is displayed. Average noise levels will typically fall in the range of 15 to 30. Average noise levels significantly higher than this are an indication of a high level of interference that may degrade the performance of the link. High noise levels can often be improved with bandpass filters, antenna placement or antenna polarization. Please contact Data-Linc Group for more information.

Average Signal Level

The average signal level indicates the level of received signal at this modem and at each of the modems used as repeaters in the link. For each of these, the signal source is the modem that transmits to it. The number is an average of the received signal levels measured at each frequency in the modem’s frequency hop table. The individual measurement values at each frequency hop channel are shown in the frequency table. The frequency table is accessed by pressing the ENTER key on the computer when the radio statistics menu is displayed.

For a reliable link, the average signal level should be at least 30 higher than the average noise level reading. When using “J” units. Low Average Signal Levels can often be corrected with higher gain antennas, antenna placement, and use of repeaters. Contact Data-Linc Group for more information.

Overall Rcv Rate (%)

The Overall Rcv Rate measures the percentage of data packets that were successfully transmitted from the master to the remote on the first attempt without requiring retransmission. A number of 75 or higher indicates a robust link that will provide very good performance even at high data transmission rates. A number of 25 or lower indicates a weak or marginal link that will provide lower data throughput. An Overall Rcv Rate of 100% will provide approximately 100 Kbaud of bandwidth with an RF data rate of 3 (Radio Transmission Parameters Menu) and approximately 150 Kbaud of bandwidth with an RF Data Rate of 2. These numbers are reduced approximately 50% if there are one or more repeaters in the network.

Number of Disconnects

If, during the course of performing a link test, the link between the master and the remote is broken, and the radios lose carrier detect, the occurrence is recorded in the Number of Disconnects value. The value indicates the total number of disconnects that have occurred from the time the link test started until the radio was put into config mode. Under normal operating conditions, the number of disconnects should be 0. One or more disconnects may indicate a very weak link, the presence of severe interference problems or loss of DC power to the Master or Repeater if one is present.

Note: a remote and/or repeater will record a disconnect if the system master is placed into configuration mode or has power interrupted while the remote and/or repeater is linked to the master

Radio Temperature

The radio temperature value is the current operating temperature of the radio in degrees C (Celsius.) For proper operation, SRM6000 radio modems must be in the range of -40° to 75° C.

Antenna Reflected Power

This is a measurement of the transmitted power that is reflected back into the transmitter from mis-matched antennas or coax, or loose connections between the radio modem and antenna. A reading of 0-5 is good; 5-30 is acceptable; 30+ indicates a problem and should be corrected.

Main Menu Option (5): Edit Multi-Point Parameters

Multi-Point Operation

In a multi-point system, a radio modem designated as a master is able to simultaneously be in communication with numerous remotes. In its simplest form, a multi-point network functions with the master broadcasting its messages to all remotes and the remotes responding to the master as appropriate.


Traditionally, a multi-point network is used in applications where data is collected from many instruments and reported back to one central site. As such, the architecture of such a system is completely different from point-to-point applications. The theoretical maximum number of remotes that can be configured into a multi-point network is a function of the data throughput needed from each of the remotes. For example, if the network will be polling remotes once a day to retrieve sparse data, several hundred remotes could be configured to a single master. If, on the other hand, each remote will be transmitting data at greater levels than fewer remotes may be connected to the master (the overall system will be closer to capacity with fewer remotes).

The theoretical limit of a multi-point system is influenced by the following parameters:

- Size of the blocks of data—the longer the data blocks the greater the system capacity
- RS232 baud rate
- The amount of contention between remotes
- Use of repeaters—a single repeater in a multi-point network will decrease overall system capacity by 50%; more than one repeater does not further decrease network capacity.

Figure 5: Multi-Point Parameters

Shown below are example settings. Please refer to supplied configuration sheets for your modem's configuration.

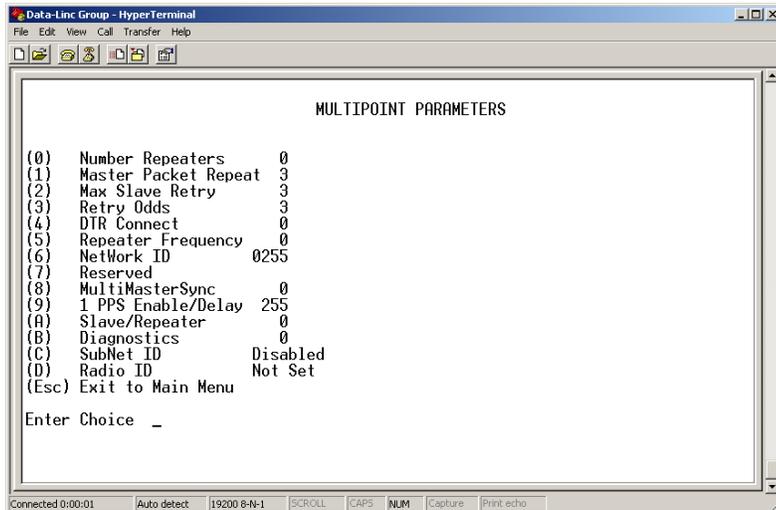

In a multi-point network, it is critical to know how many radio modems are being used as repeaters. Any radio modem that is used as a repeater essentially becomes a master to the remotes and other repeaters to which it is communicating. Therefore, the user must first identify how many repeaters are connected to the master by assigning a value in parameter **(0) Number Repeaters**. This parameter must also be set for each repeater in the system (i.e., in the event that a repeater is connected to one or more other repeaters). This parameter does need to be set for multi-point remotes.

In point-to-point operation, the SRM6000 radio modems acknowledge every data packet transmitted. In a multi-point network, the remotes do not acknowledge transmissions from a master to the remotes. This is to prevent system overload. If the remotes acknowledged all data transmissions from the master in a large multi-point system, then all system capacity would be spent having the master listen for acknowledgments from the remotes. Because the transmission is not acknowledged by the remotes, 100% confidence does not exist that every remote has received every message from the master. To address this issue, the user may modify option **(1) Master Packet Repeat**, assigning a value between 0 (the packet is transmitted once) to 9 (the packet is repeated 9 times). For networks with solid RF links, this parameter would be set at the lower end of the scale (0-1). If the network has some weak or marginal links, it would be set toward the higher values. If a remote receives a packet from a master more than once, it will discard the repeated packets received.

While packets transmitted from the master to the remotes in a multi-point network are not acknowledged, packets transmitted from remotes to the master are. However, it is possible that more than one remote will attempt to transmit to the master at the same time, and it is therefore important that a protocol exists to resolve contention for the master between remotes.

This is addressed through parameters **(2) Max Remote Retry** and **(3) Retry Odds**. The Max Remote Retry setting defines how many times (0 to 9) the remote will attempt to retransmit a packet to the master before beginning to use a back-off algorithm. Once the remote has unsuccessfully attempted to transmit the packet the number of times specified in Max Remote Retry, it will attempt to transmit to the master on a random basis.

The Retry Odds parameter determines the probability that the remote will attempt to retransmit the packet to the master; a low setting will assign low odds to the remote attempting to transmit and conversely a high setting will assign high odds. An example of how this parameter might be used would be when considering two different remotes in a multi-point network, one close in with a strong RF link and the other far from the master with a weak link. It may be desirable to assign a higher Retry Odd to the remote with the weaker link to give it a better chance of competing with the closer remote for the master's attention.

Another parameter in a multi-point network is **(4) DTR Connect**. When set at (1), the remote will connect to the master if it is free when the DTR line goes high on the 9-pin RS232 connector. In setting (2), the radio modem will accumulate data in its buffer and transmit in a burst when the buffer is full. This mode is valuable when a network has many low data rate devices and it is desirable to increase overall network capacity. In setting (0), the radio modem will transmit when RS232 data is received.

The repeater's hopping pattern must also be set in a multi-point network; this is accomplished with parameter **(5) Repeater Frequency**. Setting this parameter is in contrast with point-to-point mode where the repeater automatically uses the master's hopping pattern. The repeater may be programmed to either use the master's hopping pattern selection (0) or its own selection (1).

Option **(6) NetWork ID** allows multi-point networks to be established without the use of the Call Book. If the NetWork ID is set to any value lower than the default (255), the remotes in the multi-point network will communicate with the first multi-point master or repeater heard with the same NetWork ID. When the NetWork ID is used, multi-point masters and repeaters may be replaced without reprogramming all of the remotes in the network. In addition, this allows a remote to establish communications with different masters (though not at the same time) without having the call book numbers in the Call Book. This is very useful in mobile multi-point applications. **(8) MultiMaster Synch** is reserved for multi-point applications with concentrations of master units where it is necessary to reduce interference between the masters. Please contact the factory for more information on the use of this feature. The **(9) 1PPS Enable/Delay** This setting should not be changed from its default of 255. Contact the factory for further information.

(A) Remote/Repeater

The remote/repeater mode allows a SRM6000 in a multi-point system to simultaneously act as a remote and a repeater. When in this mode, a SRM6000 will repeat any packets sent from a master as well as send them out the RS232 port. This allows a SRM6000 set as a repeater to act as a remote at the same time. 0 disables this mode, 1 enables it. For this feature to work, the modem must be configured as a point-to-multipoint repeater.

(B) Diagnostics

The SRM6000 has the ability to run a diagnostic program while in normal operations. Contact the factory for additional information.

(C) SubNet ID

The default setting is "Disabled." Please see the SubNet ID section of this user guide.

(D) Radio ID

Used with the Diagnostics. Contact the factory for additional information.

SubNet ID

The SRM6000 series modems offer a SubNet ID system for use in multi-point networks using Network ID. This feature allows the users to dictate what path a given repeater or remote will use to achieve a link to the network master. For example, if a remote modem in a given network has line of sight to the network master and one or more repeaters, but only one repeater is close to that remote, SubNet ID can be used to link that remote with the proper repeater only.

Note: This feature can only be used in networks using Network ID with one or more repeaters.


There are two components to SubNet ID. The first is the Xmit (transmit) SubNet ID, and the second is Rcv (receive) SubNet ID. The Xmit SubNet ID is used only by repeaters and is the ID that a repeater sends out when sending data to other repeaters or remotes. The Rcv SubNet ID is the ID that repeaters or remotes look for to receive data.

Note: The master is not affected by these settings. Only repeaters and remotes use these settings. Remotes only use Rcv SubNet ID

Modem configurations are as follows (see diagram 1 below):

Master	No setting used
Repeaters	Any repeater that should be linked directly to the master should have the Rcv SubNet ID set to 0. Any repeater using another repeater as its link, needs the Rcv SubNet ID set to the Xmit SubNet ID of that repeater. The Xmit SubNet ID can be set to anything from 1 to E.
Remotes	Any remote that should be linked directly to the master should have the Rcv SubNet ID set to 0. Any remote using a repeater as its link should have the Rcv SubNet ID set to the Xmit SubNet ID of that repeater

Diagram 1

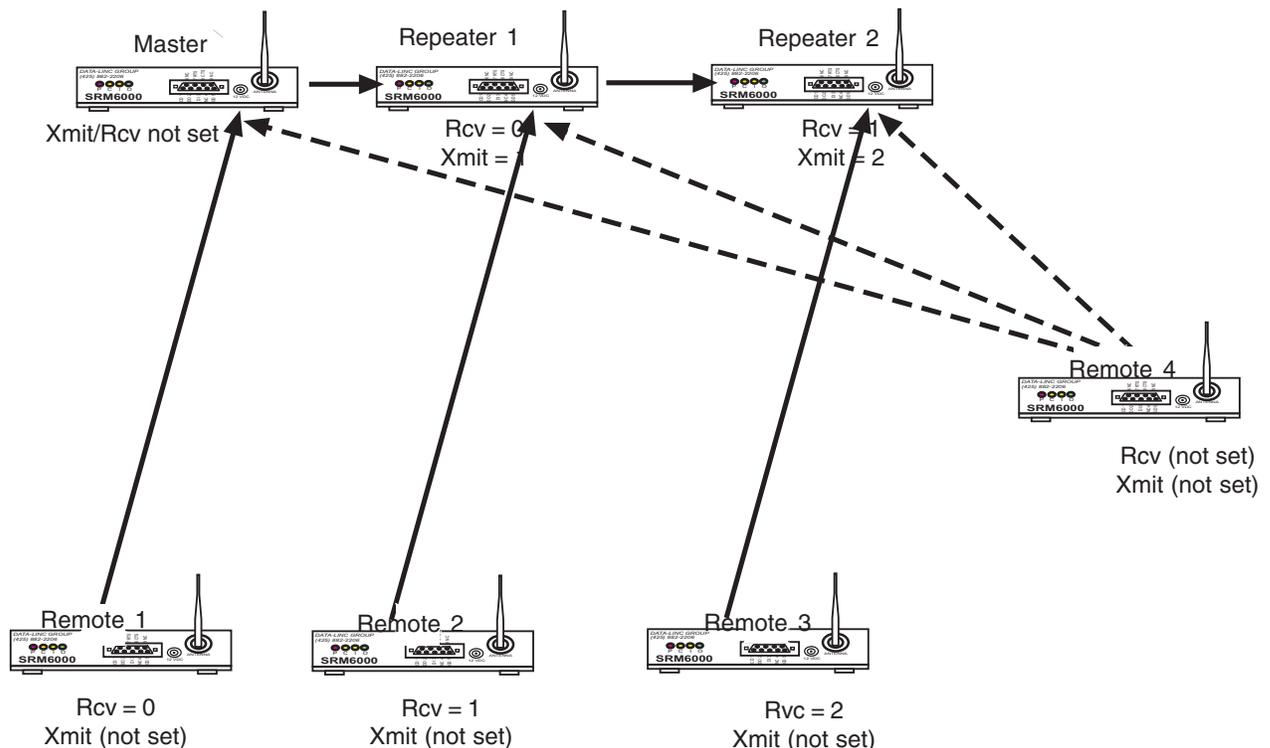

Main Menu Option (8): Password

Caution: If the password feature is enabled and you cannot remember the password, the radio modem will have to be returned to Data-Linc Group to have the password disabled. Use with caution.

Option (8) in the Main Menu allows the user to set a password, which will prevent unauthorized users to change the configuration of the modem.

Setting a Password

To enable the Password feature choose (8) from the Main Menu. You will be prompted with "New PW?" (<esc> to exit)

To back out of the process and not enable the password, hit escape. To set a password, type in exactly 4 characters. At any point in the process you can cancel by hitting the escape key. Once the 4 characters have been entered, you will be prompted with "<enter> to accept, <esc> to quit".

At this point, if you wish to accept the password entered and enable the feature, press the enter key. The password that you have chosen is displayed on the line above (please note that the password is case sensitive). To quit the process and not enable the password, press escape.

Changing a Password

Once the password feature has been enabled, it is possible to change to a new password. To enter a new password select (8) from the Main Menu. You will be prompted with "Enter Security Code". Enter the current password. Once the password has been entered correctly (it is case sensitive) you will be prompted to enter the new password. At any point this process may be cancelled by pressing escape.

Disabling Password

The process to disable the password is similar to the process to change the password. However, when prompted to enter the new password, the following procedure needs to be followed:

1. Hold the "Alt" key down and using the number key pad (not the numbers across the top of the key board) type "0255"
2. Release the "Alt" key
3. Repeat steps 1 and 2 three more times (this will enter 0255 a total of four times).
4. You will be prompted with "<Enter> to accept, <esc> to quit.
5. Hit the "Enter" key to disable the password or hit the escape key to keep the password

Special Application Jumper Settings

The SRM6000 in standard configuration needs no jumper settings other than the factory default settings. For certain applications, the SRM6000 can be set to utilize features using jumper settings (see "jumper diagram").

Note: The SRM6000's come from the factory pre-configured. These settings do not need to be changed unless a change in the system that the modems are operating in is needed, or the modems were ordered non-configured. See diagram 3 for jumper locations.

Jumpers JP5 and JP7 are used for configuring the serial port. JP5 sets the port up as a DTE or a DCE port (the default is DCE). JP7 is used for the RTS and CTS lines.

JP5 Chart

DTE	Short pins 3 to 5 & 4 to 6
DCE (default)	Short pins 1 to 3 & 2 to 4

JP7 Chart

Normal RTS/CTC operation* (default)	Short pins 1 to 3 & 2 to 4
RTS looped to CTS	Short pins 3 to 5 & 4 to 6

Note: The SRM6000 does not need the RTS or CTS line to operate. These lines are offered in the event that the attached equipment needs these lines to work correctly.

On standard SRM6000's, JP3 and JP4 are shorted and cannot be changed. On special application units where U1, U3 and U4 are used, JP3 and JP4 need to be removed in order for these chips to work correctly. If an SRM6000 is ordered from the factory as a standard unit, these chips will not be installed. If an SRM6000 is ordered from the factory for a special application, it can be re-configured for standard use. To do this, short JP3 pins 1 & 2 and JP4 pins 1 & 2. The special usage chips and their jumper settings will be bypassed.

JP2 is used for special applications when U1, U3 and U4 are used and JP3 pins 1&2 and JP4 pins 1&2 are not shorted. Pins 1 through 6 are used for baud rate control of the special usage chips and pins 7 through 10 are used to set the chips up for what they are going to be used for (see JP2 chart)


JP2 Chart/Baud Rate

Pins 1-2	Pins 3-4	Pins 5-6	Baud Rate
Off	Off	Off	19.2
Off	Off	On	115.2
Off	On	Off	57.6
Off	On	On	38.4
On	Off	Off	9600
On	Off	On	4800
On	On	Off	2400
On	On	On	1200

JP2 Chart/Chip Operation

Pins 7-8	Pins 9-10	Chip Operation
Off	Off	Connect master (always 10 bit word)
Off	On	Break pulse 10 bit word
On	On	Break pulse 11 bit word

Diagram 2

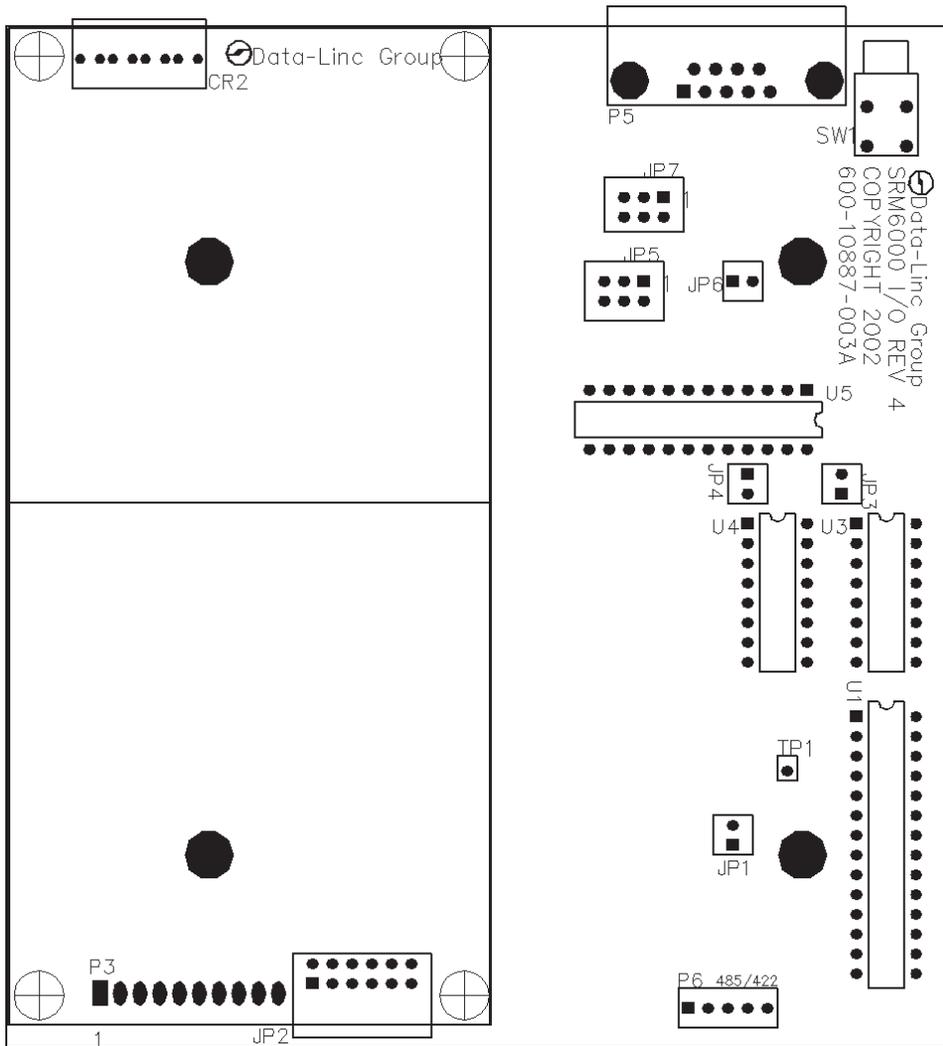

SRM6000 Location

Placement of your SRM6000 is likely to have a significant impact on its performance. In general, the rule of thumb with the SRM6000 is that the higher the placement of the antenna, the better the communication. In practice you should also place the radio modem itself away from computers, telephones, answering machines, and other similar equipment. A 6-foot RS232 cable will usually provide ample room for placement away from other equipment. To improve the data link, Data-Linc Group offers directional and omni directional antennas with cable lengths ranging from 10 to 200 feet.

When using an external antenna, placement of that antenna is critical to a solid data link. Other antennas in close proximity are a potential source of interference. It is also possible that slight adjustments in antenna placement (as little as 2 feet) will solve noise problems. In extreme cases, such as when the radio modem is located close to pager or cellular telephone transmission towers, Data-Linc Group offers a band pass filter to reduce the out of band noise.

Using an External Antenna

In certain circumstances it may be desirable to extend the range of the SRM6000 radio modem by using an external antenna in place of the standard whip antenna. The radio modem is equipped with a standard SMA external jack. This allows the use of external omni directional or yagi antennas. These are part of kits provided by Data-Linc Group and include coax cable. These antennas allow versatility in the SRM6000's deployment, extending its range and allowing it to get around obstructions.

The use of an external antenna may radically improve the results obtained with SRM6000 radio modems. It is imperative to obtain line of sight with the antennas, and changes in placement height of as few as a couple of feet may make the difference between no link and one that is solid and reliable.

If external directional antennas are used, FCC regulations concerning effective radiated power limitations must be followed.

Caution: Any antenna placed outdoors must be properly grounded. It is required by FCC regulations that qualified personnel experienced in antenna installation and familiar with local codes and regulations complete the antenna installation. It is also required by FCC regulations that only approved antennas be used. Use extreme caution when installing antennas and follow all instructions included with the antennas.

The use of an external antenna subjects the radio modem to greater exposure to direct lightning strikes. It is strongly recommended that a lightning arrestor be used on all outdoor antenna installations.

Long RS232 cable runs should also be avoided in areas with increased lightning activity or static electricity unless they are properly isolated from the radio modem. Nearby lightning strikes or elevated levels of static electricity may lead to voltage spikes on the line, causing failure in the radio modem's RS232 interface. It is also recommended that the RS232 data cable not be located near high voltage power lines as this can cause interference in data communications, damage the SRM6000 as well as an increase in risk of personal injury.

SRM6000 Front Panel LEDs

The LEDs on the SRM6000's front panel provide important information on the operation of the radio modem. Compare the status of a radio modem's LEDs with the tables below to aid you in the troubleshooting process.

Table 7: LED Status in Point-to-Point

P=power C=carrier detect I=data in O=data out												
Configuration	Master				Remote				Repeater			
LED Indicators	P	C	I	O	P	C	I	O	P	C	I	O
Powered, no RF link	SR	O	O	O	SR	O	O	O	SR	O	O	O
RF link established	SR	SA	O	O	SR	SA	O	O	SR	O	O	O
Data flow master to remote	SR	SA	FY	O	SR	SA	O	FG	SR	SA	O	O
Data remote to master	SR	SA	O	FG	SR	SA	FY	O	SR	SA	O	O
Configuration Mode	SR	SA	O	MG	SR	SA	O	MG	SR	SA	O	MG

Data out LED lights momentarily when the configuration button is depressed.

SR	Solid Red
FA	Flashing Amber
FY	Flashing Yellow
FG	Flashing Green
MG	Momentary Green
O	Off
SA	Solid Amber


Table 8: LED Status in Multi-Point Mode

Configuration	Master				Remote				Repeater			
LED Indicators	P	C	I	O	P	C	I	O	P	C	I	O
Powered, no RF link	SR	O	O	O	SR	O	O	O	SR	O	O	O
RF link established	SR	O	O	O	SR	SA	O	O	SR	O	O	O
Data flow master to remote	SR	FA	FY	O	SR	SA	O	FG	SR	SA	O	O
Data remote to master	SR	FA	O	FG	SR	SA	FY	O	SR	SA	O	O
Configuration Mode	SR	SA	O	MG	SR	SA	O	MG	SR	SA	O	MG

Data out LED lights momentarily when the configuration button is depressed.

Table 9: RS232 Pin Assignments

Pin	Assignment
1	Carrier Detect
2	Transmit Data
3	Receive Data
4	DTR
5	Ground
6	Data Set Ready
7	RTS
8	Clear to Send
9	N/C

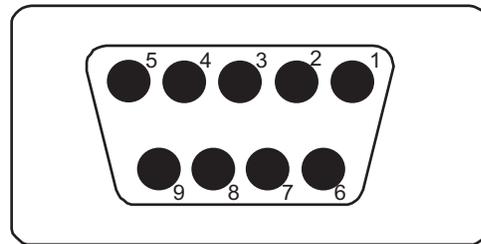

DB-9 Female

Sample Data Communication Links

The SRM6000's versatility allows data communication links to be established using a variety of different configurations. This, in turn, makes it possible to extend the range of the SRM6000 and get around obstacles.

Diagram 3 shows the most common and straightforward link, a master communicating to a remote in a dedicated link.

Diagram 3


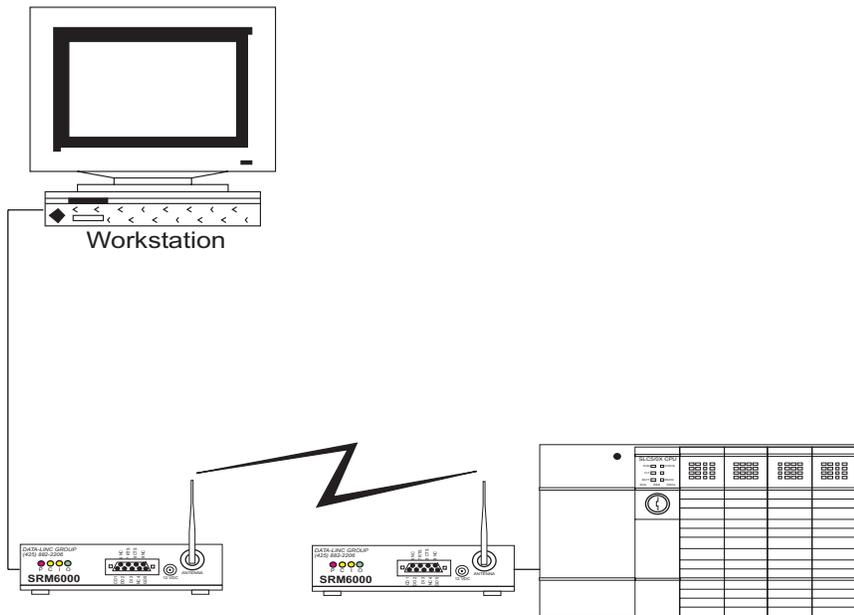


Diagram 4 depicts how a link might be set up using a repeater. The repeater may be sitting on a hilltop or other elevated structure to link the master to the remote. In this setup, it may be desirable to use an external omni directional antenna on the repeater; to extend the range Yagi antennas could be used on either or both of the master and remote.


Diagram 4

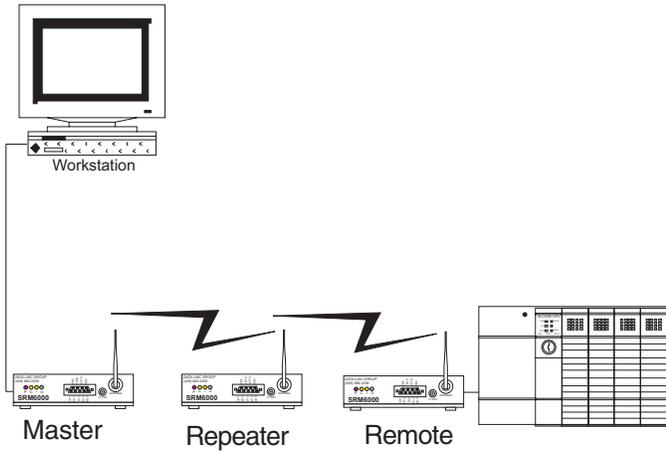

When a repeater is used the RF speed is cut in half, making 115,200 KBaud uncompressed throughput unachievable. The baud rate, however, may still be set at 115,200.

Diagram 5 depicts an example of a point-to-multi-point system. In this example, any data sent from the master is broadcast to all three remotes, two of which receives it through a multi-point repeater. The data is in turn sent out of the RS232 port of each of the three remotes.

Diagram 5

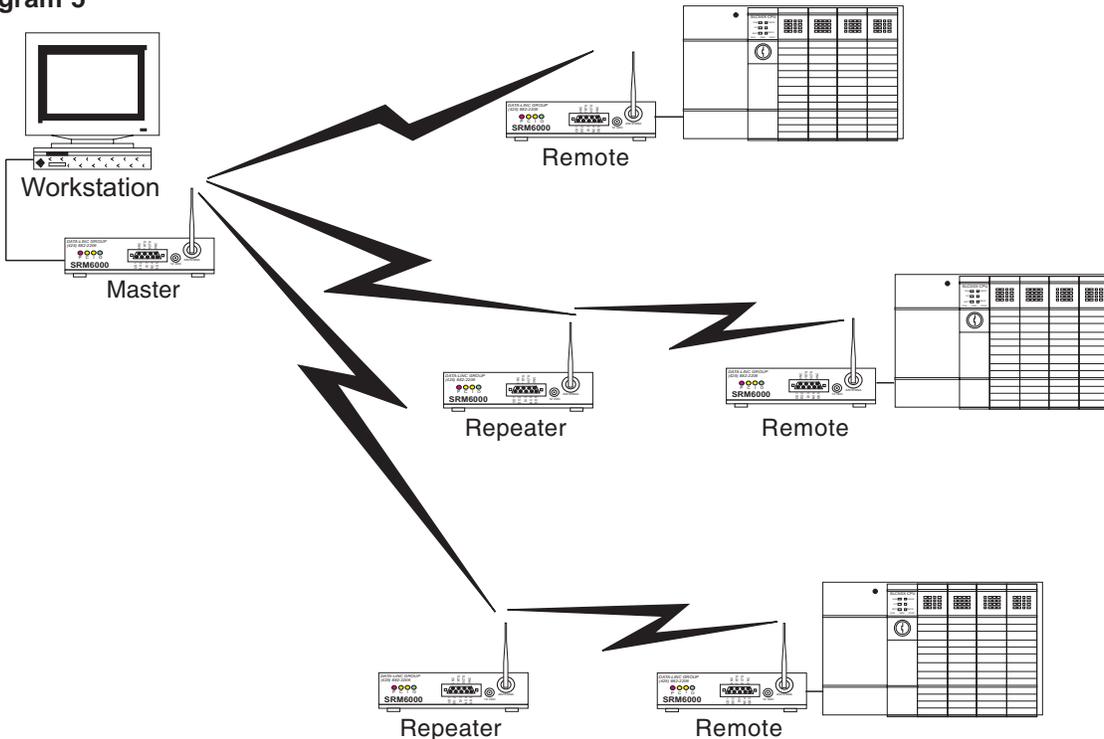

Technical Specifications

Range	Rated*: 25 miles (40km); installed: 35 miles(56km)
RS232 Data Throughput (uncompressed)**	1200 Baud - 115.2 Kbaud
RS232 Interface	Asynchronous, full -duplex
System Gain	138 dB
Minimum Receiver Decode Level	-108 dBm @ 10 ⁻⁶ raw BER
Operating Frequency	902-928 MHz
Modulation Type	Spread Spectrum, GFSK
Spreading Code	Frequency Hopping
Hop Patterns	15 (user selectable)
Output Power	1 Watt maximum (+30 dBm)
Error Detection	32 Bit CRC with packet retransmit
Antenna	Bench test whip provided. Standard SMA connector allows use of external directional or omni directinal antennas
Power Requirements	10.5-18 VDC Center Pin Positive AC Wall Adapter Provided
Power Consumption	650 mA Transmit 100 mA Receive 180 mA Average
Connector	RS232 9 pin female. 9 pin male to 9 pin female straight through cable provided
Unit Address	Unique, factory set
Operating Modes	Point-to-Point Point-to-Multipoint Store and Foward Repeater
Operating Environment	-40° to +167° F (-40° to +75° C)
*Line of sight distance using omni directional antennas	
**Throughput measured assuming 75% frequency availability	
***The true power consumption is impacted by the amount of data being sent	

Troubleshooting

“I am able to link to a remote unit within line of sight when the SRM6000 I have is outside. However, as soon as I walk inside with it I lose the link, even if I place the radio modem by the window which faces the remote unit.”

Many modern buildings use energy efficient glass that wreaks havoc on RF signals. This glass contains a metal film that is very effective in blocking all radio waves. If your situation is as described above, the preferable solution is to install an antenna outdoors.

“I have several radio modems set up to communicate with each other in a point-to-multi-point mode, yet they are not establishing contact.”

In a multi-point system there are two critical parameters which must be set correctly to establish a communications link:

1. The remote's Call Book must contain the call book number or Network ID of the master and/or repeaters to which it will be communicating.
2. All radios must be set to run at the same RF data rate. Remote modems must match the Masters RF data rate.

“In bench testing several units in a multi-point system, it appears that they are not communicating through the multi-point repeater. When all units are powered, the remotes' Carrier Detect lights are on, indicating a connection, yet when I unplug the repeater, those remotes set up to communicate through that repeater remain connected.”

In a multi-point system, a remote will attempt to communicate with any master or repeater (which looks like a master in a multi-point system) that is in its call book. Therefore, it may be that the remotes are communicating with the repeater when it is powered, and when it is unplugged they are establishing a link with the master. To test whether or not this is what is occurring, go into the call book of the remotes which are set up to communicate through the repeater and remove the master's call book number. When all units are powered, the remotes' Carrier Detect lights should be green. When the repeater is unplugged, the remotes should lose contact and Carrier Detect should turn red.

“My radio modems have established a solid connection as indicated by the LEDs, yet the application I am running is not transmitting and/or receiving data correctly.”

In most cases this is due to an incompatible port setting on one or both ends of the system. Ensure that each radio modem port setting and the device that it is connected to are set up the same.

It is also possible that the devices are not properly configured to communicate with each other. The quickest acid test in a situation like this is to try to get the application up and running using an RS232 null modem cable before deploying the SRM6000 in the field. The SRM6000 essentially functions as a null modem cable. If the application will not work with a hard wire connection then it will not work with the SRM6000, and the problem lies within the application or other hardware (such as the computer or PLC serial ports).

Technical Support

Data-Linc Group maintains a fully trained staff of service personnel who are capable of providing complete product assistance. They can provide you with technical, application and troubleshooting, spare parts and warranty assistance. Our technical staff is based in Bellevue, Washington USA and may be reached at (425) 882-2206 or e-mail support@data-linc.com

Product Warranty

Data-Linc Group warrants equipment of its own manufacture to be free from defects in material and workmanship for one year from date of shipment to original user. Data-Linc Group will replace or repair, at our option, any part found to be defective. Buyer must return any part claimed defective to Data-Linc Group, transportation prepaid.

Return Material Authorization

If a part needs to be sent to the factory for repair, contact Data-Linc Group's corporate office and request a Return Material Authorization (RMA) number. The RMA number identifies the part and the owner and must be included with the part when shipped to the factory.

Contact Information

Corporate Office


Data-Linc Group

3535 Factoria Blvd. SE
Suite 100
Bellevue, Washington 98006 USA

Telephone: (425) 882-2206
Fax: (425) 867-0865
E-mail: info@data-linc.com
Web site: www.data-linc.com

Appendix A

Enclosure Dimensions

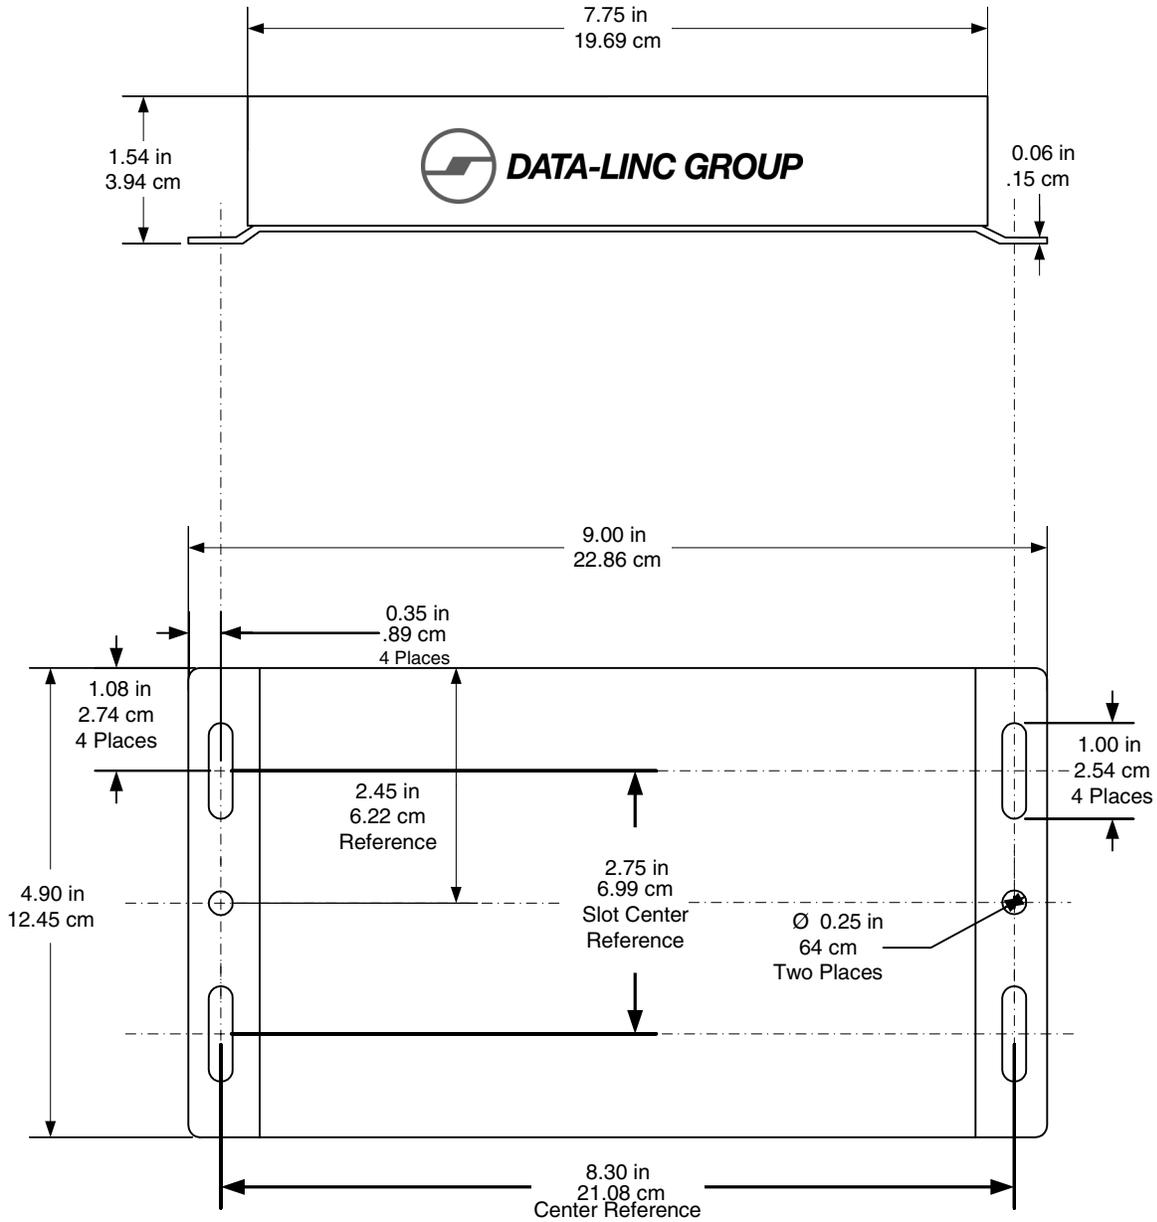

Note: Enclosure Size, Mounting Holes and Locations may change without notice, contact Data-Linc Group (425) 882-2206 for the latest Enclosure Dimensions.